
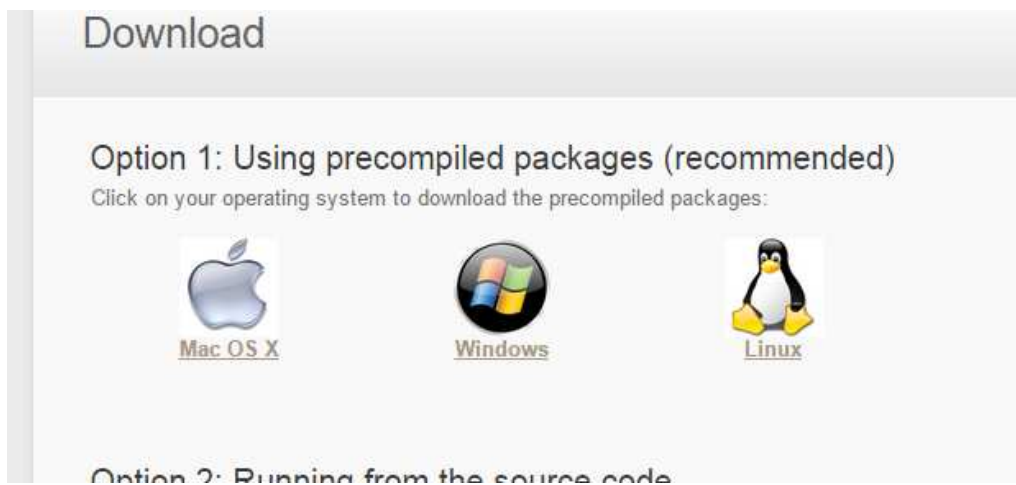


新版 Slic3r 安裝程序

1. 下載新版 Slic3r 程式

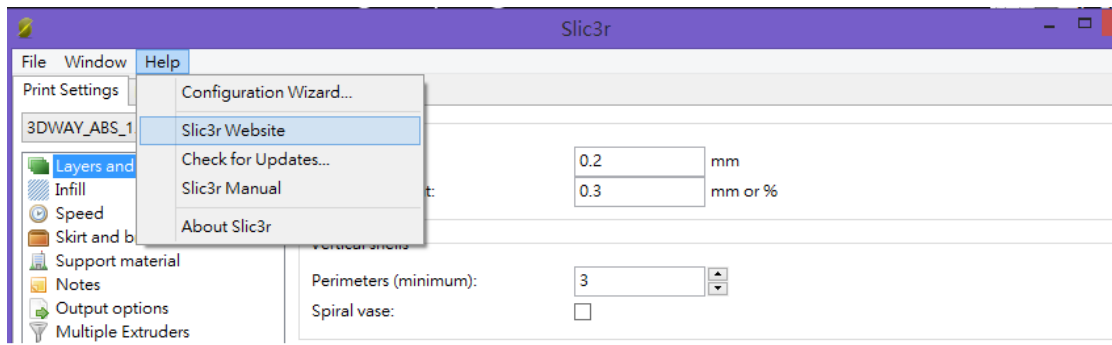


Parent Directory	-
old/	2014-08-04 15:19 -
slic3r-mswin-x64-1-1-7-stable.zip	2014-08-04 14:16 14M
slic3r-mswin-x64-1-2-0-experimental.zip	2014-08-04 14:30 14M
slic3r-mswin-x86-1-1-7-stable.zip	2014-08-04 15:19 14M
slic3r-mswin-x86-1-2-0-experimental.zip	2014-08-04 15:38 14M


Apache/2.4.7 (Ubuntu) Server at dl.slic3r.org Port 80

2. 安裝 Slic3r 路徑設定


將下載之程式複製於下面路徑

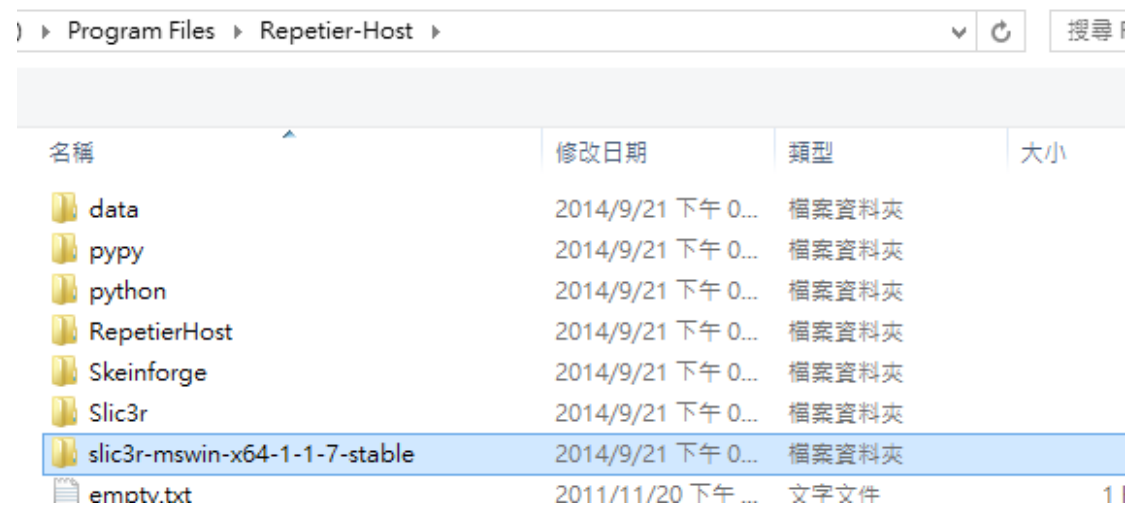

按 " 設置命令列 "

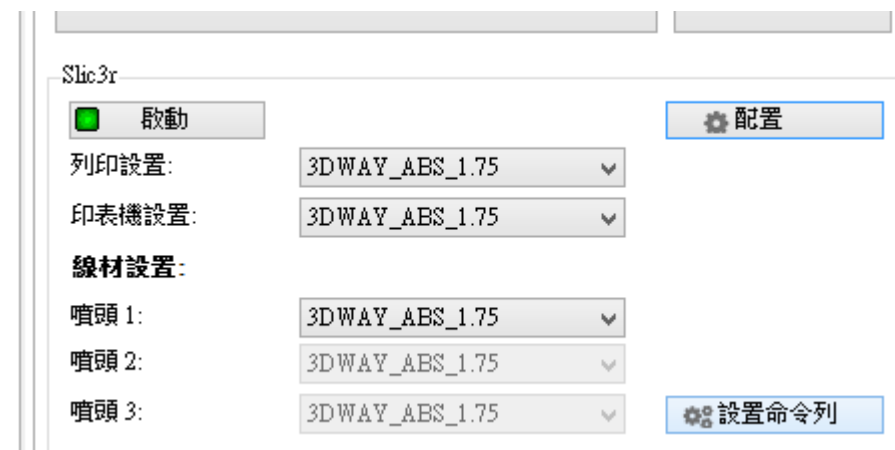

按 " 流覽 "

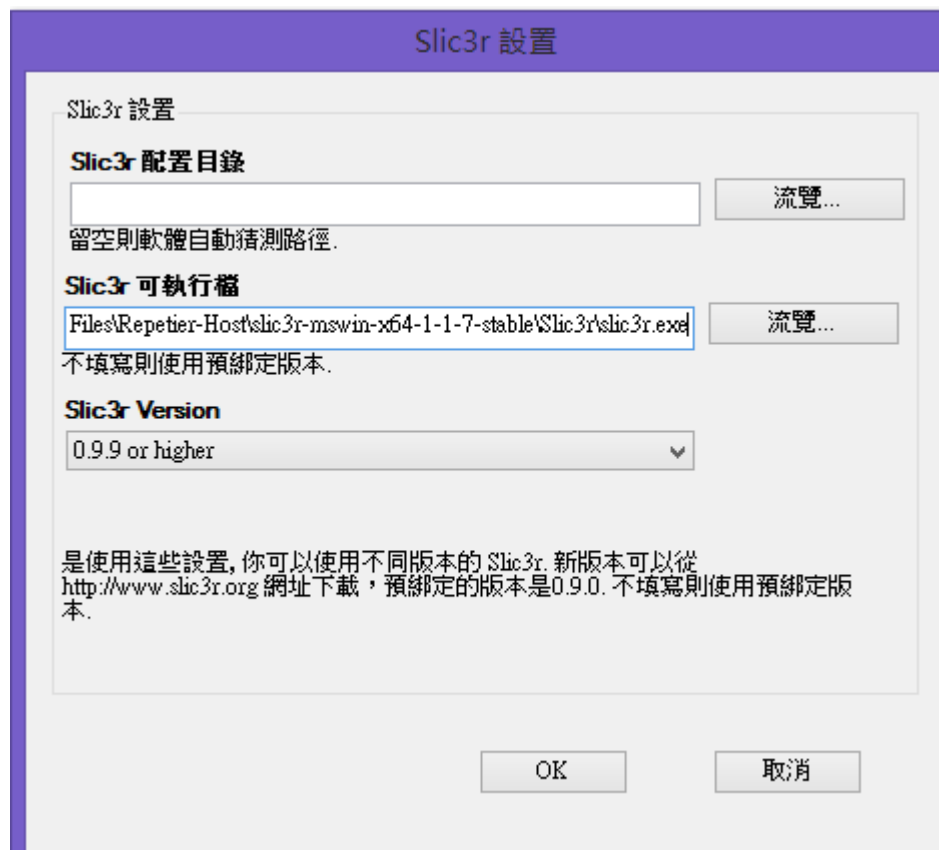

路徑指向以下目錄選取 slic3r.exe

